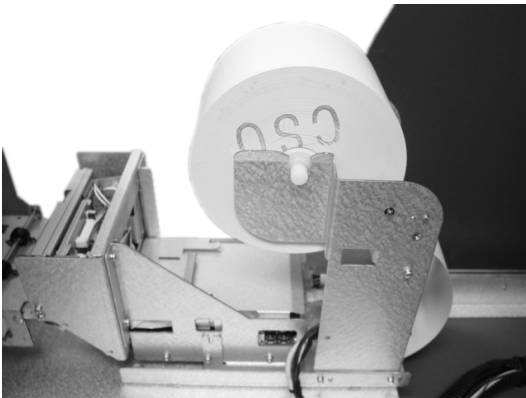 


4.2.5 Loading the Receipt Paper



Step 1

Open the top Bezel. (See 4.1.4 Opening the top Bezel.)



Step 2

Place the paper onto the supplied spindle with the Coated Side Out as shown in the picture. Feed the paper out through the back, where it will curl back under the tension bar.

Step 3

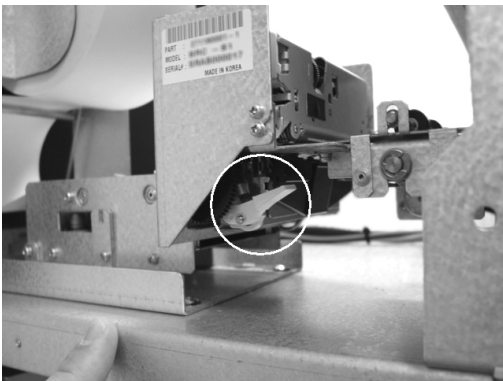 
Prepare the new paper roll. Note below.

NOTE:

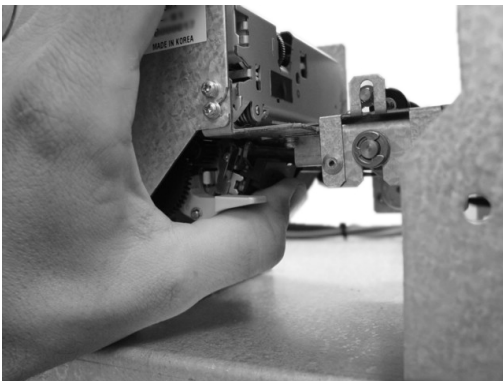 
1. Make sure the roll is in its proper roll form. (A deformed roll may cause jamming problems.)
2. When replacing the new roll, make sure the end of the roll paper is clean cut.

**Step 4**

Feed the paper over the bar behind the roll and under the spring loaded tension bar. Slide the paper through the guides. The paper will not feed until the machine is initialized (powered on). If the paper does not feed, make sure the paper is all the way in the loading guide. Also make sure the roller assembly is closed (see below)

**Step 5**

The roller assembly can be opened by pressing down on the green lever in front of the printer.

**Step 6**

To close the roller assembly, lift up on the rollers. The roller assembly must be completely closed before the printer will operate. Press up on the roller assembly rather than on the green lever to close.

When finished loading paper, close the top bezel and remove the key.